

Disc Traps

Model: DTCS

THERMODYNAMIC DISC TRAP WITH TRI-CLAMP CONNECTIONS

Bestobell's DTCS Series is a 316L Stainless Steel thermodynamic disc trap, that is compact with a lightweight design and tri-clamp® end connections.

This clean steam trap, constructed of 316L stainless steel which offers better corrosion resistance for non-sanitary applications than other thermodynamic traps. It meets the requirements of quick response applications in the steam system. Condensate entry below the disc, concentric to the disc/seal ensures a clean parallel lift of the disc with reference to the seat, eliminating localized wear and tear.

The DTCS is ideal for fluctuating loads and pressures. It is virtually maintenance free with a one year replacement warranty.



ORDERING SCHEMATIC

MODEL				6	7	8
D	T	C	S			

6	SIZE
2	1/2"
3	3/4"

7	CONNECTIONS
1	Tri-Clamp®

8	SPECIALS
0	None
4	20 Ra Exterior Finish

THERMODYNAMIC DISC TRAP WITH TRI-CLAMP CONNECTIONS

SPECIFICATIONS

Maximum Pressure Allowable: 227 psig (15,6 bar)

Maximum Operating Pressure: 227 psi (15,6 bar)

Maximum Temperature Allowable: 842°F (450°C)

Line Sizes: 1/2", 3/4"

End Connections: Tri-Clamp®

Options: 20 Ra external finish

Weight: 1.7 lbs (0.77 kgs)

Maximum operating back pressure at the outlet should not exceed 80% of the inlet.

Minimum differential pressure for satisfactory operation 3.5 psi (0,24 bar)


MATERIALS

Body: AISI 316L

Disc Cap: AISI 316L

Disc: AISI 316L

DIMENSIONS

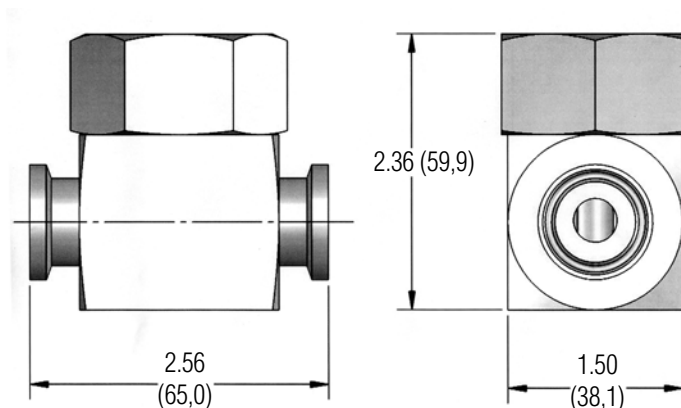

INSTALLATION

The DTCS should be installed in the horizontal plane with the cap on top. Full port isolation valves should be installed upstream and downstream of the trap for safe maintenance. Always open isolation valves slowly until normal operating conditions are achieved to avoid system shocks.

PREVENTATIVE MAINTENANCE

The DTCS can be maintained without disturbing the piping connections. Ensure that the trap is isolated - upstream and downstream - before attempting to dismantle it. Allow the trap to cool before dismantling. Periodic cleaning of the disc and seat will facilitate trouble-free performance. Do not use abrasives / corrosive media for cleaning. Only the disc and seat are subject to wear. A worn disc can be replaced and slight seat wear can be corrected by resurfacing on a lap plate.


For new installations, the system should be properly flushed prior to fitting the trap.

PRESSURE RATINGS

ΔP	bar	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Capacity	psi	14	29	43	58	72	87	101	116	130	145	159	174	188	203	217	232
	kg/hr	125	200	260	300	340	380	410	440	460	480	500	510	515	520	520	520
	pph	275	440	572	660	748	836	902	968	1012	1056	1100	1122	1133	1144	1144	1144

RECOMMENDED INSTALLATION

From equipment
being drained

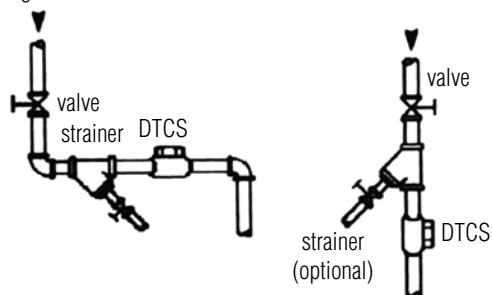

BESTOBELL
AQUATRONIX
SINCE/DEPUIS 1953

Head Office
2880 Argentinia Road, Unit 3
Mississauga, ON L5N 7X8
salesdesk@bestobell.com
1-800-668-3979
www.bestobell.com

Since 1953, Quality Products to Sense, Measure & Control
Depuis 1953, Produits De Qualités Pour Détecter, Mesurer & Contrôler

Montréal Office
970 Montée de Liesse, #204
St.Laurent, QC H4T 1W7
ventes@bestobell.com
1-877-331-1225

Atlantic Office
166 North Side Road
Riverport, NS B0J 2W0
dmossman@bestobell.com
902-529-0355